

Audio System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

Basic operation



- 1 Sound quality modes
- 2 Listening position (if equipped)
- 3 Automatic Sound Levelizer (ASL)
- 4 Audio sources
- 5 Power/Volume

Audio sources

AM·SAT: AM radio/Satellite Radio*

FM: FM radio

DISC·AUX: CD player/Auxiliary audio device

*: The optional Lexus genuine satellite tuner and antenna allows you to receive and play XM[®] Satellite Radio broadcasts. (Subscription is required. For detailed information, see the Owner's Manual.)

Radio



- 1 Traffic information
- 2 Station presets
- 3 Text messages
- 4 Radio tuner
- 5 RDS genre select
- 6 Scan
 - All radio stations: press
 - Preset radio stations: press and hold
- 7 Seek

Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

CD player

Playing an audio CD



- 1** Random playback
Current CD: press
All CDs: press and hold
- 2** Repeat
Current track: press
Current CD: press and hold
- 3** Text information
- 4** CD select
- 5** CD load
- 6** Scan
All tracks in current disc: press
First track of each disc: press and hold
- 7** Eject
- 8** Track select/rewind/fast-forward

Playing a CD with MP3/WMA files



- 1** Random playback
Current file: press
All files in current folder: press and hold
- 2** Repeat
Current file: press
All files in current folder: press and hold
- 3** Folder select
- 4** Text information
- 5** File select
- 6** CD select
- 7** CD load
- 8** Scan
All files in current folder: press
First file of each folder: press and hold
- 9** Eject



■ Loading a CD

- 1 Press the LOAD button.
WAIT is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from WAIT to LOAD.

■ Loading multiple CDs

- 1 Press and hold the LOAD button until you hear a beep.
WAIT is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from WAIT to LOAD.
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.
Repeat the procedure for the remaining CDs.
To stop the operation, press the DISC-AUX button.

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1 Power on/change mode: press
Power off: press and hold
- 2 Volume
- 3 Radio: radio tuner
CD: CD/track/file (MP3/WMA) select

Air Conditioning System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".



- | | |
|-----------------------------------|---------------------------------------------|
| 1 Driver side temperature control | 7 Passenger side temperature display |
| 2 Switch to automatic mode | 8 Micro dust and pollen filter |
| 3 Driver side temperature display | 9 Passenger side temperature control |
| 4 OFF button | 10 Windshield defog/defrost |
| 5 Fan speed controls | 11 Outside air/recirculated air mode switch |
| 6 Air flow controls | 12 A/C switch |
| | 13 Dual mode switch |

Using the automatic mode



- 1 Press the AUTO button.
- 2 Adjust the temperature using the TEMP buttons.

Adjusting the temperature in DUAL mode



In DUAL mode, driver and passenger side temperature settings can be adjusted separately.

- 1 Press the DUAL button.
- 2 Adjust the driver side temperature using the TEMP buttons, and the passenger side temperature using the PASSENGER TEMP buttons.

Garage Door Opener


The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

Programming HomeLink®

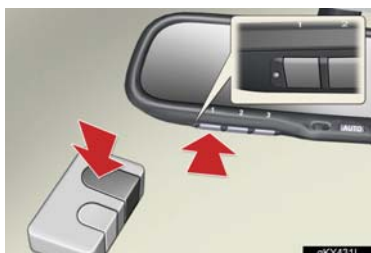

- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door has the rolling code feature:

- 4 Press the training button on the motor-head unit in your garage.
- 5 Press and release the programmed HomeLink® button twice. The garage door may open.

If the door does not open, press and release the same button once again.

■ Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

■ Operating HomeLink®



Press the appropriate HomeLink® button.
The indicator light should come on.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

Ashtrays



► Front

To remove the ashtray, push the release lever.



► Rear


To remove the ashtray, press down on the plate and lift the ashtray out.

Seat Heaters / Seat Heaters and Ventilators (If Equipped)



► Seat heaters

Turn the dial toward **1**.

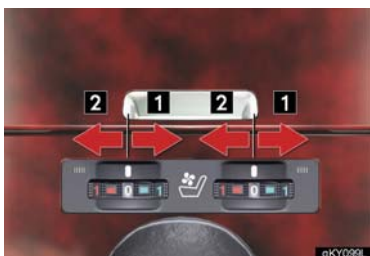

► Seat heaters and ventilators

Seat heaters: turn the dial toward **1**.


Ventilators: turn the dial toward **2**.

Console Boxes




► Front

To open, slide and lift the armrest with the knob pulled up.

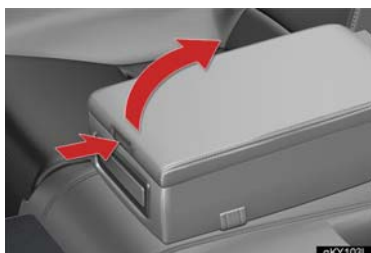

► Rear (if equipped)

To open, press the lock release button and lift the armrest.

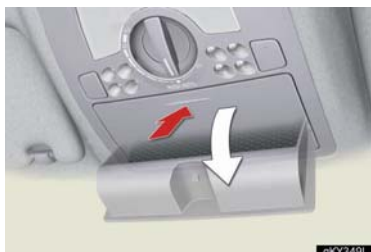

► Overhead console

To open, press the lid.

There is a power outlet located in the front console box.



Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Glove Box

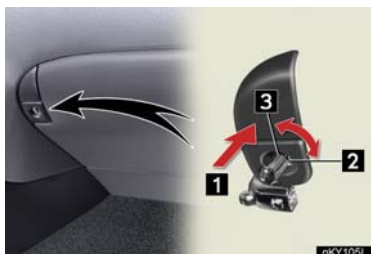

1 Open: press the button.

2 Lock

3 Unlock


The glove box can be locked and unlocked using the mechanical key.

Cup Holders



► Front (type A)

To open, press down on the front of the lid.

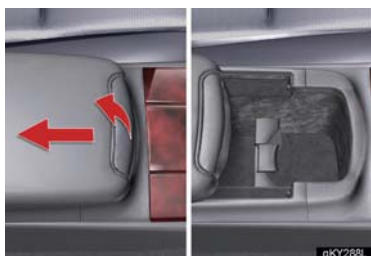

► Front (type B)


To open, pull and hold the knob and slide the armrest.



► Rear

To open, press in and release.

Interior Lights

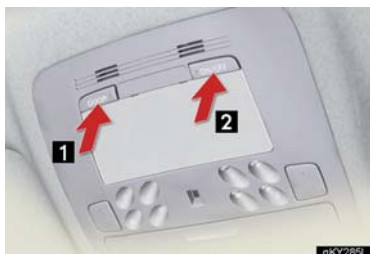

► Without moon roof

- 1 Door position ON/OFF
- 2 ON/OFF



► With moon roof

- 1 Door position ON/OFF
- 2 ON/OFF

Rear Sunshade (If Equipped)



To raise the rear sunshade, press the switch. Press the switch again to lower it.

The sunshade automatically lowers to ensure visibility when reversing.

Compass



To display the compass, press and hold the AUTO button for 3 or more seconds.

To cancel the display, press and hold the AUTO button again for 3 or more seconds.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Trunk Storage Extension

Longer items can be loaded in the vehicle by utilizing the trunk space and rear seat area.



1 Pull down the rear armrest.



2 Open the inside trunk door from the trunk and load baggage or other items.

Luggage Mat



Pull the lever upwards when lifting the luggage mat up.



The lever can be hooked on the edge of the trunk.